

KENWOOD

HD Radio Tuner KTC-HR100

Broadcaster Mode Application Note

Oct 8,2003

Version 1.1

Table of Contents

1.	How to start or stop broadcaster mode.....	1
1.1.	Start	1
1.2.	Stop	1
2.	Specification in broadcaster mode of operation.....	1
2.1.	Software version display	2
2.2.	BFO	2
2.3.	Receive Mode	2

Versions

1.0	Jun 26, 2003	first release
1.1	Oct 8, 2003	BFO OFF assigned preset key [3] BFO ON assigned preset key [5] default BFO is OFF

1. How to start or stop broadcaster mode

1.1. Start

1. Press the reset button of a head unit.




2. Select HD Radio source.
Press the [SRC] Button.
Select the "HD Radio" display.
3. Perform the following key operations within 30 seconds.
 - a) Select the key function selection. Press the [Next] button.
 - b) Press the Play/Pause key 5 times.
 - c) Press the preset key in order from 1 to 6.
 - d) "Alignment" is displayed.
4. Broadcaster mode is started.

Even if it turns off ACC or source off, this mode remains as it is.

1.2. Stop

Press the reset button of a head unit. The receiver returns to the normal mode.

2. Specification in broadcaster mode of operation

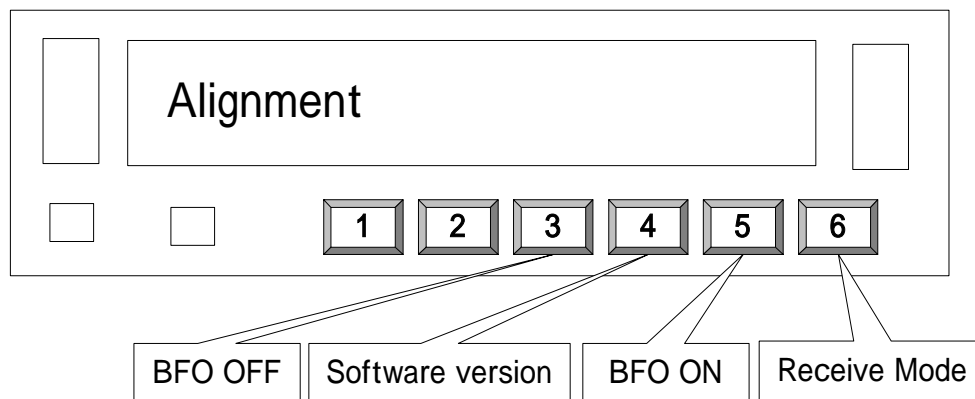

2.1. Software version display

- a) Select the key function selection. Press the [Next] button.
Repeatedly press the button until “DISP” is displayed above the [3] button.
- b) Press the [3] (“DISP”) button.
- c) Press [3] (“TEXT”) button.
- d) Press [|<<] or [>> |] or [FM] or [AM] button and select “Title”
- e) Press the [RTN] button.
- f) Select the key function selection. Press the [Next] button.
- g) Press the preset key [4]. The version of HC and the version of IDM are displayed.

2.2. BFO

BFO means the receiver changes front output for analog digital alignment.

R-Analog, L-Digital.

Preset key [3] is BFO OFF.

Preset key [5] is BFO ON.

The default in broadcaster mode is OFF.

2.3. Receive Mode

Preset key [6] can change receive mode. Repeatedly press the [6] button, receive mode change “Auto”, “Digital”, “Analog”, “Auto”.....

The default in broadcaster mode is “Auto”.